

Item	Each Trip	Each Mo.	3 mos.	6 mos.	Each Year	As Req.	Procedure
Fiberglass Exterior		X					Wash with warm water and mild detergent
				X			Wax with liquid or paste wax
Roof & Roof Components		X					Inspect and re-seal as needed
					X		Lubricate roof vent mechanism w/light oil & clean completely
Windows & Doors		X					Check vinyl seals when washing exterior
			X				Check seals for damage and repair as needed
					X		Lubricate door hinges & step components as needed
					X		Adjust & lubricate window latches w/powdered graphite or light oil
Seals & Adhesives		X				Lube door locks & strike pocket, incl. exterior storage & access doors	
LP Gas System					X		Inspect and re-seal as needed
					X		Check for leaks and road damage
Water & Drainage		X					Have qualified service person check for leaks & adjust if needed
	X						Check hoses, fittings and connections for leaks and signs of wear
					X		Check drainage system for leaks and road damage
Electrical System					X		Sanitize system
	X						Winterize system depending on local seasonal conditions
					X		Check GFI circuits
Appliances					X		Perform maintenance on generator as outlined in generator manual
	X						Check and service batteries
		X					Remove food and ice from refrigerator after each trip
Slide-Out Mechanisms		X				Clean fan blades and wash filter on range exhaust hood	
Safety Equipment					X		Check for obstructions and dirt on exterior appliances vents
	X						Lubricate slide-out rails
		X					Clean smoke detector
			X				Test smoke detector operation
Trailer Lights					X		Test LP leak detector / CO detector
	X						Check fire extinguisher pressure and condition
Carpeting					X		Replace detectors as recommended by manufacturer
	X						Check all clearance lights for function
Wood Surfaces		X					Check brake and turn signals for function
					X		Vacuum after each trip
Seats					X		Clean
Chassis & Components					X		Clean pre-finished panels and wood
					X		Lubricate all mechanisms and inspect for proper operation
Weight & Distribution	X						Check all seat belt buckles, release mechanisms & belt webbing
Axles (Towable)				X			Follow chassis lubrication & maintenance procedures & schedules
Springs					X		Be sure unit is within specified load limits & weight distribution
Suspension					X		Mounting bolts should be torqued to manufacturers specifications
					X		Check for broken or flattened springs
Hub & Drum Assemblies					X		Check for worn or loose fasteners and shackle link wear
					X		Repack wheel bearings yearly
					X		Check for damage or wear
Brakes (Towable)					X		Inspect seals for damage or leaks
					X		Check for scoring or wear
					X		Check operation and/or uneven wear
Lug Nut Torque (Towable)					X		Test for proper drag and adjust as needed
	X						Test braking function and performance
Tires	X						Inspect breakaway switch/pull pin (for resetable) and test for proper function
	X						Lug nuts should be torqued to manufacturer specifications
	X						Tire pressure should be adjusted to match the specifications on the tire.
	X						Inspect tire tread for unusual wear and proper tread depth